
HOW TO MEASURE - WOVEN JACKETS


MENS AND WOMENS - ALL DIVISIONS


Name	Description
LFH30	LENGTH:FRONT FROM HPS
LBH33	LENGTH:CB FROM NK SEAM
CDA1	CHEST:1 INCH DOWN FROM ARMHOLE
CDF2	CHEST:1 INCH DOWN FROM ARMHOLE FOLDED ALONG CURVE
WP20	WAIST:PLACEMENT FROM HPS
WW21	WAIST:WIDTH
HHP1	HIGH HIP:PLACEMENT FROM HPS
HHW2	HIGH HIP:WIDTH
SW071	SWEEP/BOTTOM OPENING:BACK ONLY ALONG THE CURVE SEAM TO SEAM
SBO72	SWEEP/BOTTOM OPENING:STRAIGHT
SL75	SHOULDER SLOPE
AS77	ACROSS SHOULDER SEAM TO SEAM/EDGE TO EDGE
AF78	ACROSS FRONT 5 INCHES FROM HPS
ABC80	ACROSS BACK 5 INCHES FROM CBNK
SW83	SHOULDER SEAM WIDTH
NW5	NECK WIDTH:SEAM TO SEAM/ EDGE TO EDGE
NDH8	NECK DROP:FRONT FROM HPS TO BUTTON (CARDIGAN)
AHF27	ARMHOLE:FRONT
AHB28	ARMHOLE:BACK
SLS43	SLEEVE LENGTH:(LONG)FROM SHOULDER SEAM
MW45	MUSCLE WIDTH 1 INCH BELOW AH
EW60	ELBOW WIDTH 8 INCHES BELOW AH MEAS. A SLEEVE INSEAM
SO61	SLEEVE OPENING(LONG SLEEVE)

HOW TO MEASURE
WOVEN JACKETS

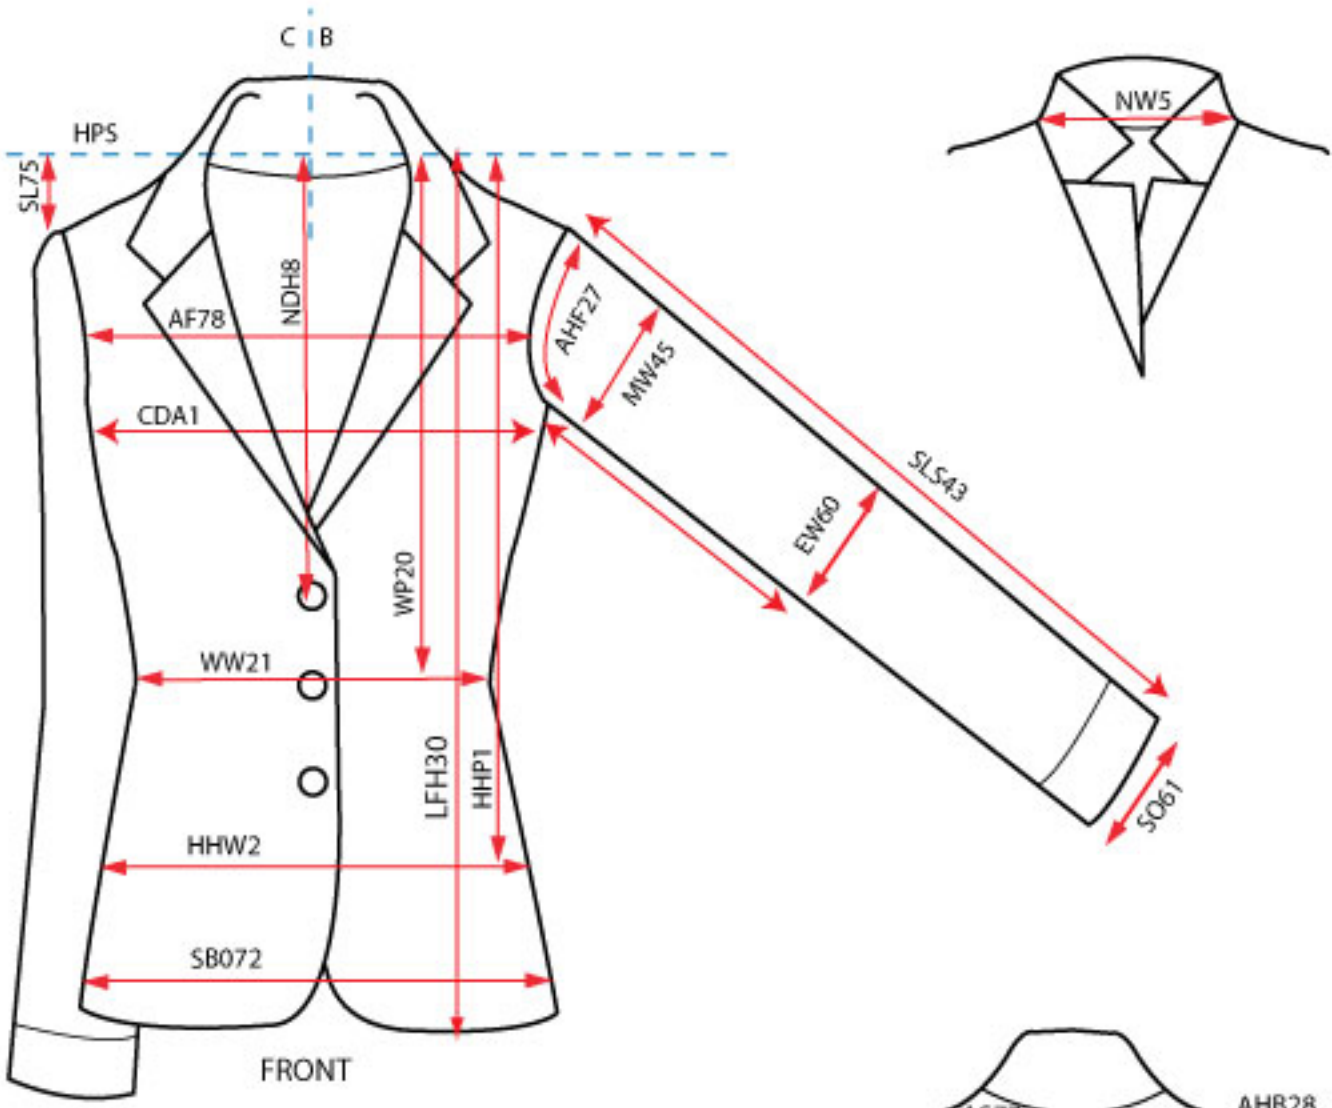

FRONT

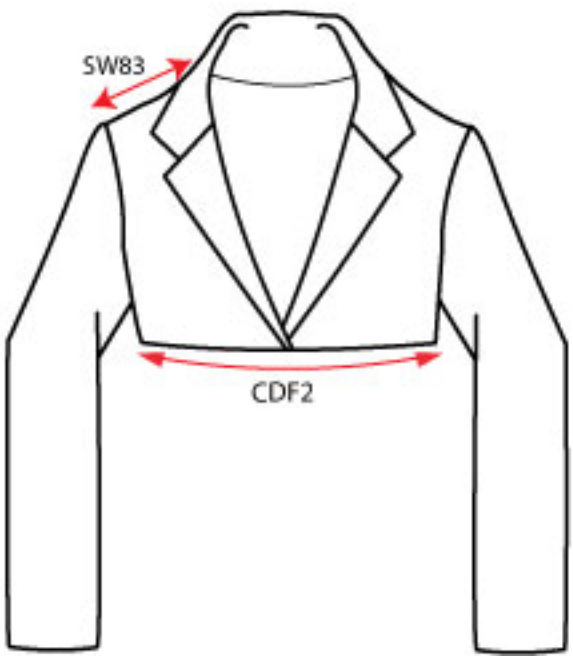

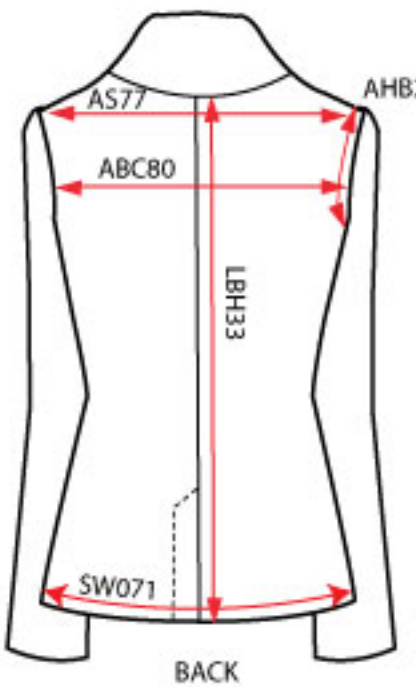

BACK