

HOW TO MEASURE - BOTTOMS

MENS AND WOMENS - ALL DIVISIONS


Name	Description
WH01	WAISTBAND: HEIGHT
WW55	WAISTBAND: WIDTH AT TOP EDGE (PLACE TOP EDGES TOGETHER)
WS03	WAISTBAND: WIDTH AT SEAM (PLACE TOP EDGES TOGETHER)
HHP06	HIP: HIGH HIP 6 1/2 IN UP FROM CROTCH POINT (STRAIGHT)
HL07	HIP: LOW HIP 3 1/2 IN UP FROM CROTCH POINT (STRAIGHT)
HHP3	HIP: HIGH HIP () IN FROM WB SEAM (3 POINT)
HL3	HIP: LOW HIP ()IN FROM WB SEAM (3 POINT)
THB1	THIGH: 1IN BELOW CROTCH
MT6	MIDTHIGH: 6IN BELOW CROTCH
KN14	KNEE: 14IN BELOW CROTCH
LO10	LEG OPENING: FULL LENGTH
LO21	LEG OPENING: SHORT
CH30	CUFF/HEM HEIGHT
LI25	LENGTH: INSEAM LENGTH
LO26	LENGTH: OUTSEAM LENGTH FROM WB SEAM
FR14	RISE: FRONT RISE FROM CROTCH POINT TO WB SEAM/TOP OF BAND
BR15	RISE: BACK RISE FROM CROTCH POINT TO WB SEAM/TOP OF BAND
FL05	FLY: FRONT FLY OPENING LENGTH

HOW TO MEASURE BOTTOMS

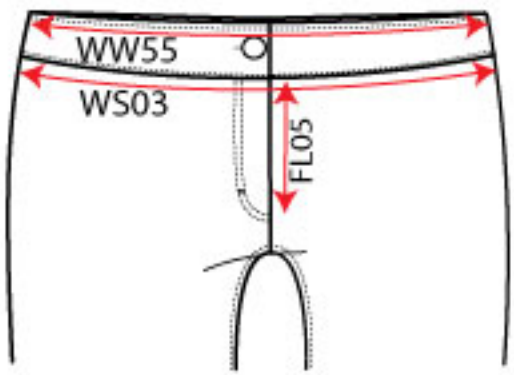


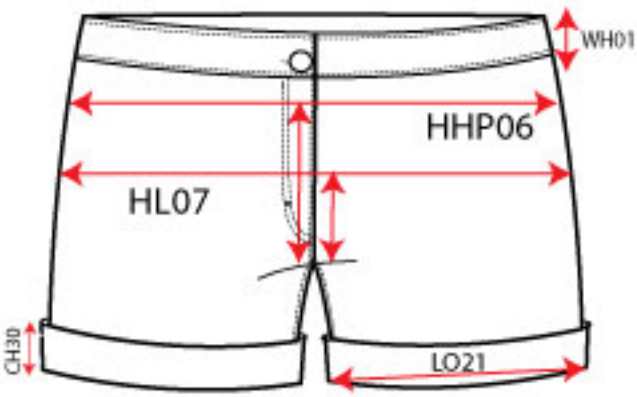


HIP STRAIGHT UP FROM CROTCH

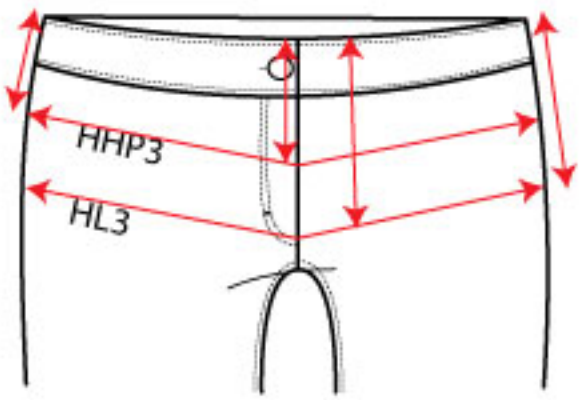

HIP 3 POINT METHOD

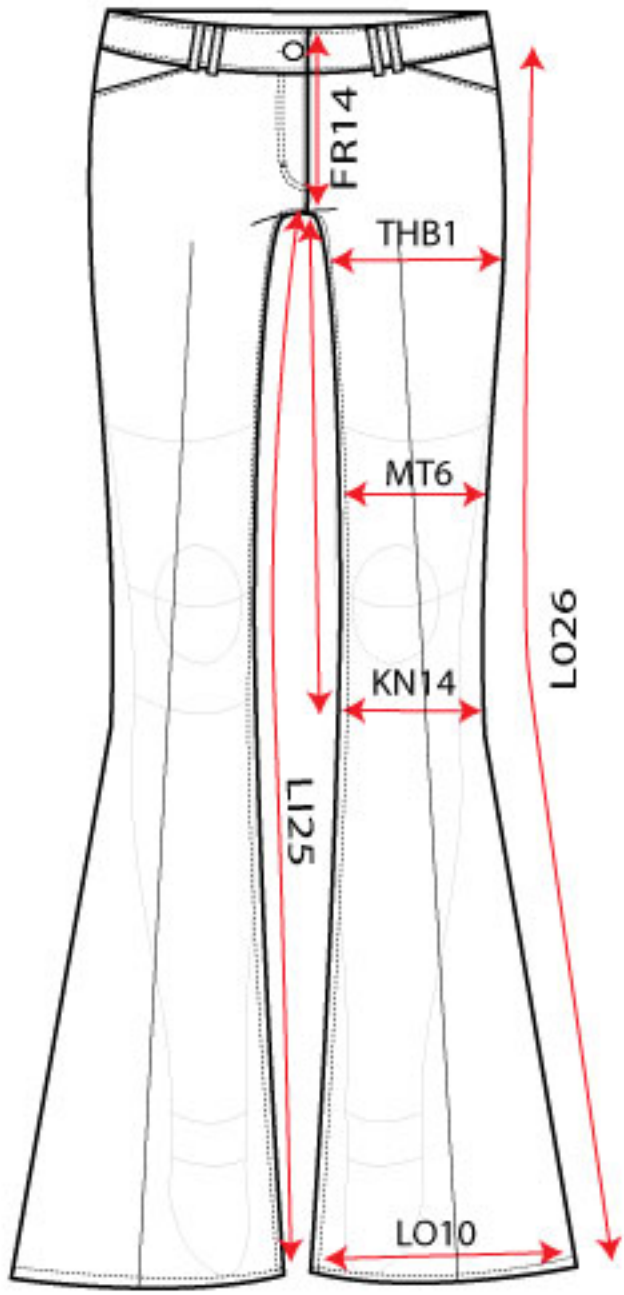

FRONT

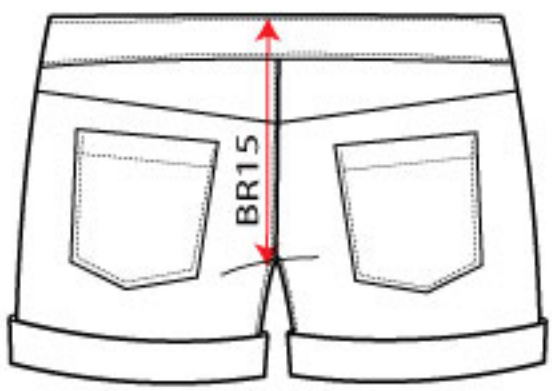

BACK