
HOW TO MEASURE - CAMI


WOMENS - ALL DIVISIONS

Name	Description
LBH33	LENGTH:CB FROM NK SEAM
LFS34	LENGTH:FRONT LENGTH FROM STRAP JOIN
CDA1	CHEST:1 INCH DOWN FROM ARMHOLE
BNW13	BACK: ACROSS TOP EDGE SEAM TO SEAM ALONG EDGE (RELAXED)
EW49	EMPIRE:WIDTH AT TOP OF EMPIRE SEAM
EB50	EMPIRE:WIDTH AT BOTTOM OF EMPIRE SEAM
ETH6	EMPIRE:BAND HEIGHT AT SIDE SEAM
EPS5	EMPIRE:PLACEMENT FROM AH AT SIDE SEAM
EMH4	EMPIRE: HEIGHT FROM POINT TO SEAM (CAMI)
WWD7	WAIST:WIDTH AT 7 INCHES DOWN FROM AH
HHW13	HIGH HIP:WIDTH AT 13 INCHES FROM AH
SBO72	SWEEP/BOTTOM OPENING:STRAIGHT
AFW81	ACROSS FRONT WIDTH AT STRAP JOIN EDGE TO EDGE
ABW82	ACROSS BACK WIDTH AT STRAP JOIN EDGE TO EDGE
SL87	STRAP:SHOULDER STRAP LENGTH (WITH 2 INCH ADJUSTABLE)
NFND	NECK DROP: FRONT FROM STRAP JOIN (CAMI)
NBDS	NECK: BACK DROP FROM CF SEAM TO SEAM/EDGE TO EDGE
NFDS	NECK:FRONT DROP FROM CB SEAM TO SEAM/EDGE TO EDGE
AH026	ARMHOLE:SIDESEAM TO STRAP JOIN (CAMI)
BAHP	ARMHOLE BACK: SIDE SEAM TO STRAP JOIN (CAMI)


HOW TO MEASURE
CAMI

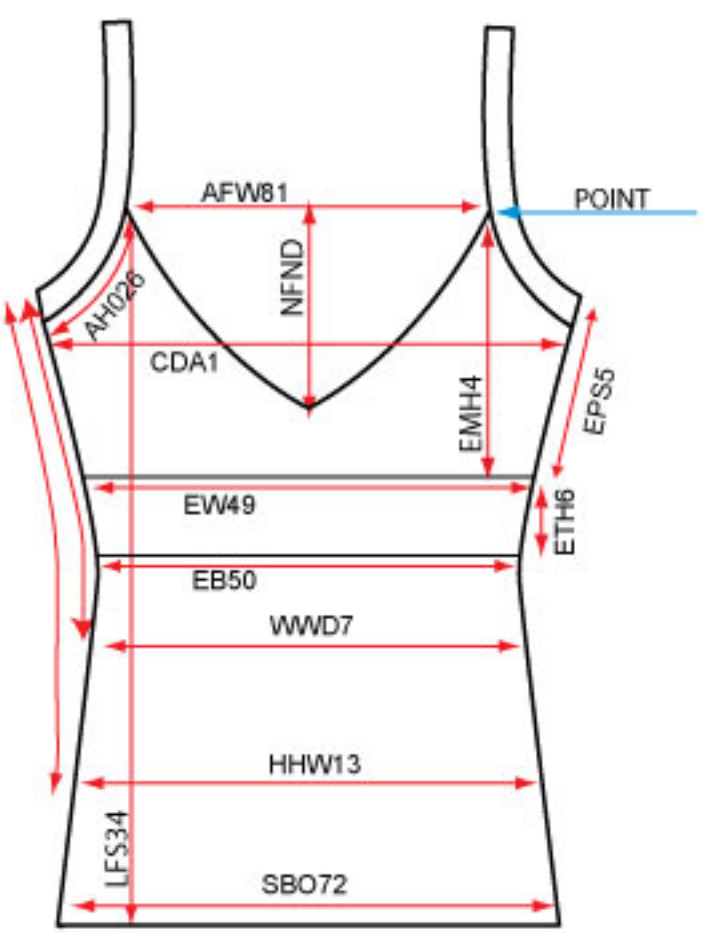


FRONT

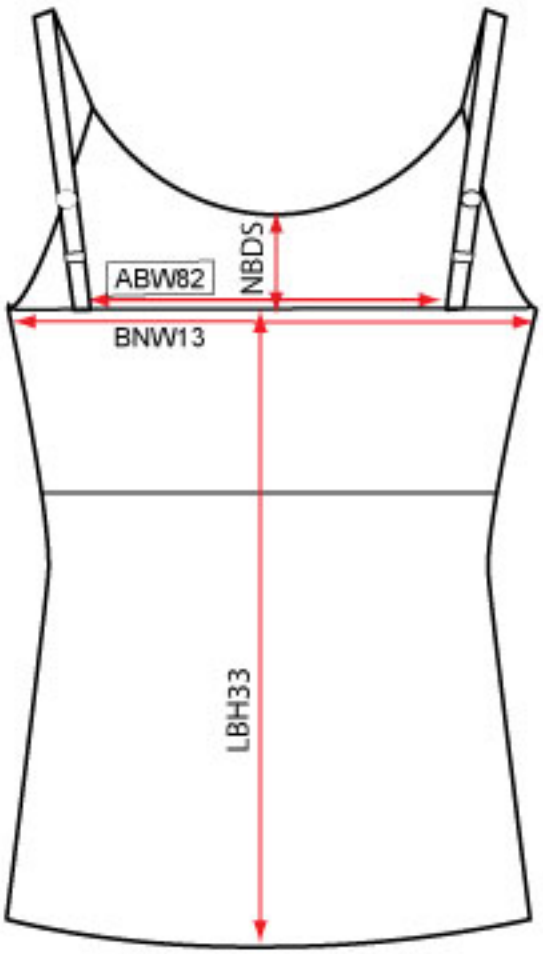


BACK

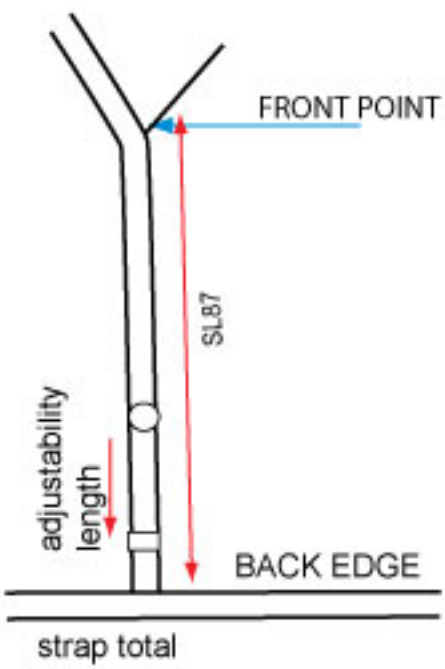

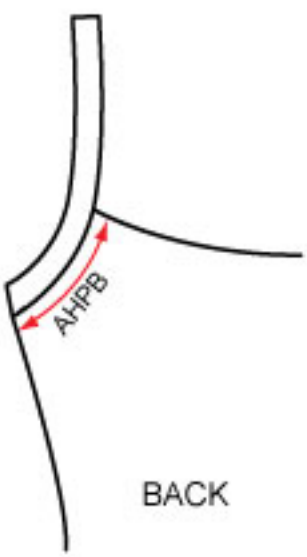

BACK

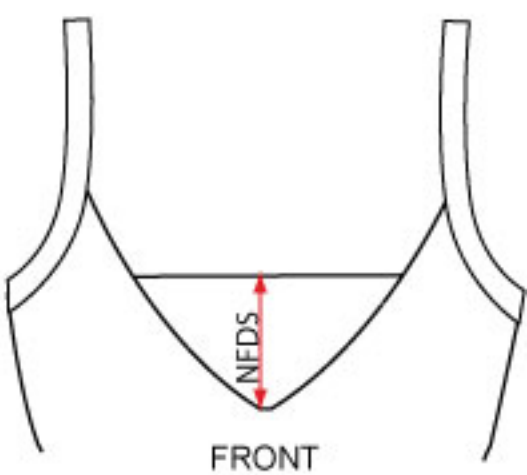

FRONT