
HOW TO MEASURE - POCKETS & YOKE


MENS & WOMENS - ALL DIVISIONS

Name	Description
PFP25	POCKET FRONT: PKT PLACEMENT FROM SS ALONG WB SEAM
PFS26	POCKET FRONT: PKT PLACEMENT FROM WB SEAM ALONG SIDE SEAM (VERTICAL)
PF027	POCKET FRONT: OPENING ALONG CURVE EDGE
CPS28	COIN POCKET: PLACEMENT FROM SIDE SEAM
CPO113	COIN POCKET OPENING
CPW29	COIN POCKET: PLACEMENT FROM WB SEAM
PWW1	POCKET: WELT WIDTH (HORIZONTAL)
PWH2	POCKET: WELT HEIGHT (VERTICAL)
PFW3	POCKET FLAP: WIDTH (HORIZONTAL)
PFH4	POCKET FLAP: HEIGHT (VERTICAL)
PTW5	POCKET: TOP PKT WIDTH (HORIZONTAL)
PBW6	POCKET: BOTTOM PKT WIDTH (HORIZONTAL)
PH7	POCKET: HEIGHT (VERTICAL)
PHI6	BACK POCKET INNER: HEIGHT (VERTICAL)
PHO5	BACK POCKET OUTER:HEIGHT (VERTICAL)
PYI44	POCKET POSITION: FROM YOKE SEAM/WB SEAM INNER
PYO45	POCKET POSITION: FROM YOKE SEAM/WB SEAM OUTER
PPCB46	POCKET POSITION: FROM CB SEAM
BPCB	BACK POCKET POSITION/SPREAD
YHCB	YOKE HEIGHT AT CB
YHSS	YOKE HEIGHT AT SIDE SEAM
YKW	YOKE WIDTH FROM SIDESEAM TO CB ALONG SEAM
PFS9	POCKET FRONT: SLASH POCKET OPENING
PF08	PCKET FRONT: OPENING AT SIDE SEAM
PFS83	POCKET: FRONT: SLASH PKT PLACEMENT FROM SS ALONG WB

HOW TO MEASURE POCKETS AND YOKES


SLASH POCKET

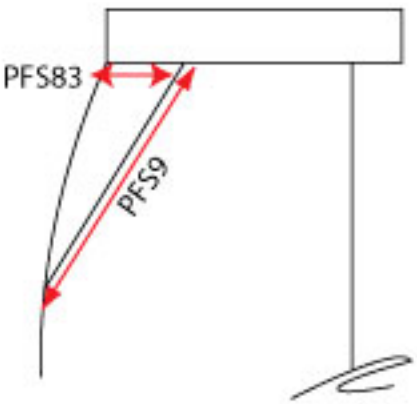

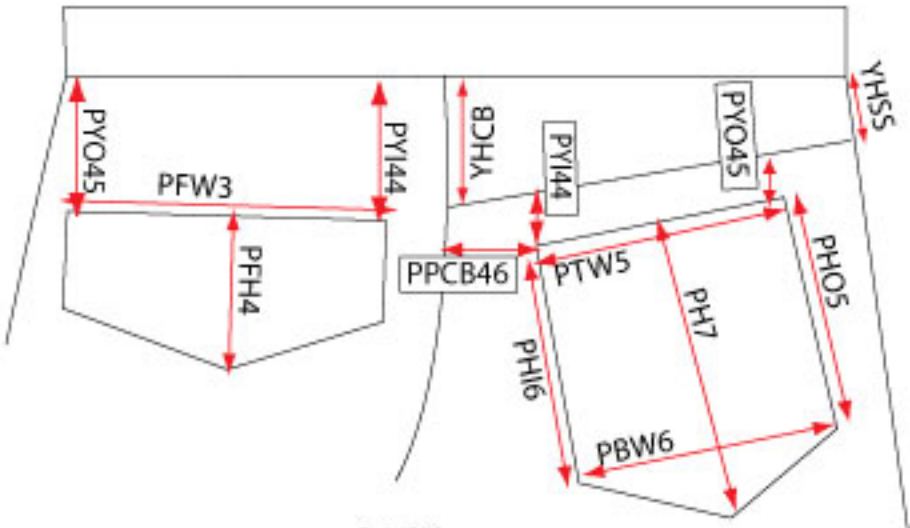



BACK

SIDE SEAM POCKET

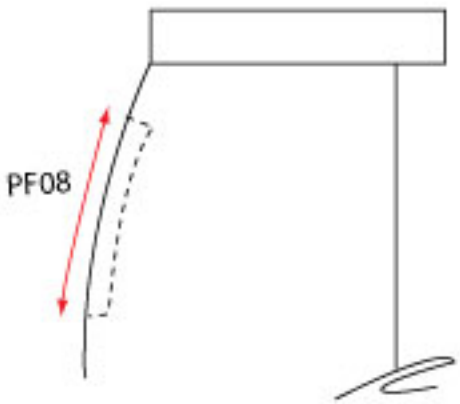


WELT POCKET

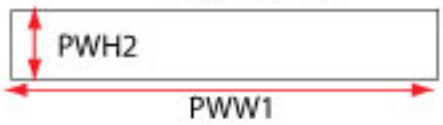

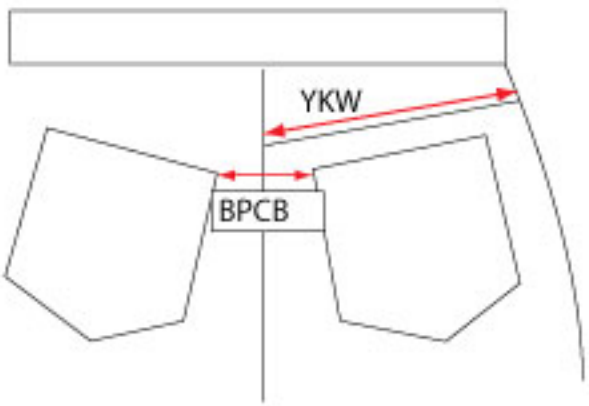

BACK

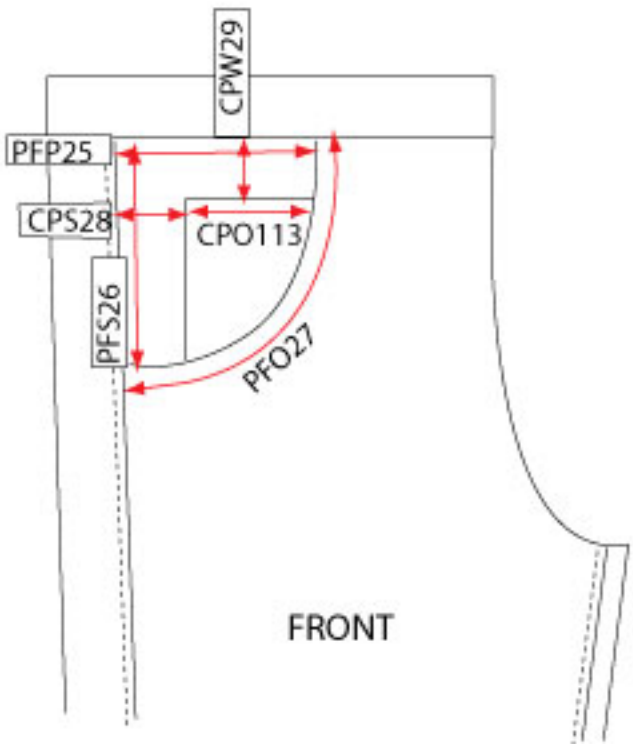

FRONT